


# Wiring diagram ekey dLine/Winkhaus blueMatic EAV4

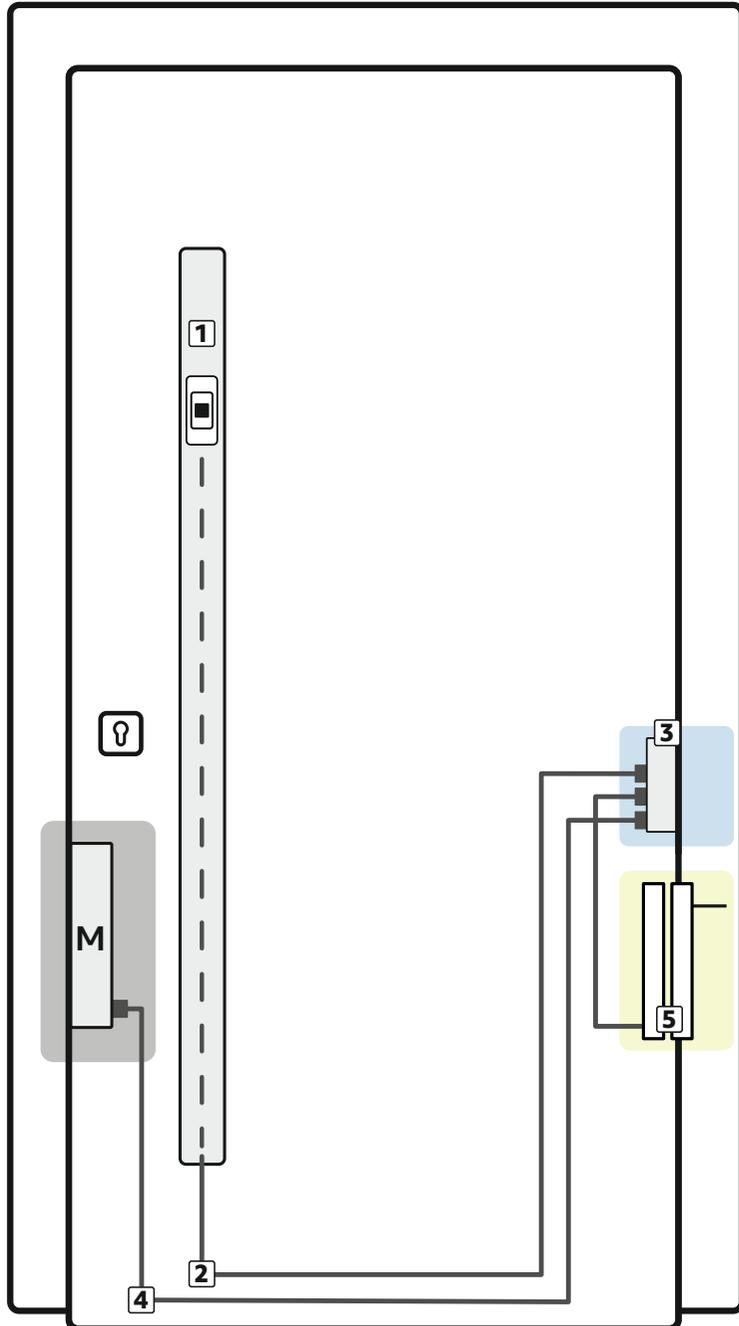


YOUR FINGER. YOUR KEY.

ID423/821/0/829: Version 1, 2024-08-19



## Connection to the motorized lock


4

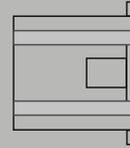

Pin	Color	Description
4	yellow	Opening signal
3	green	Opening signal
2	brown	GND (-)
1	white	VDC (+)

## Connection to the control unit

4

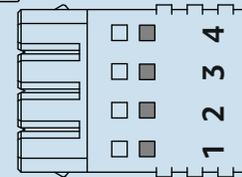


Pin	Color	Description
4	yellow	Opening signal
3	green	Opening signal
2	brown	GND (-)
1	white	VDC (+)

⚠ Jumper must be removed! ⚠

## Connection to the electrical installation

Color	Description
white	VDC (+) (24)
brown	GND (-)
green	Do not assign
yellow	Do not assign
blue	Input
gray	Input
pink	Do not assign
red	Do not assign

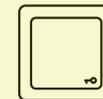

Potential-free request-to-exit button for manual door opening

⚠ Each unused core must be insulated separately! ⚠

### ⚠ DANGER

**Risk of electrocution:** All ekey devices are to be operated with Safety Extra Low Voltage (SELV). Only use power supplies rated protection class 2 with safety approval according to EN 62368-1.

Failure to do so will create a risk of fatal electrocution. Only certified electricians are authorized to carry out electrical installation work on mains systems.

### ⚠ ATTENTION

**Property damage in the event of incorrect mounting and wiring:** The system devices are operated using electricity. They could be destroyed if they are mounted and wired incorrectly. Mount and wire the system devices correctly before connecting the power.

### 📖 NOTICE

This wiring diagram is not subject to updating. We reserve the right to make technical modifications and change the product's appearance; any liability for errors and misprints is excluded.

- 1 ekey dLine fingerprint 201001 (450007)
- 2 ekey dLine cable FP 20130x or 20132x
- 3 ekey dLine controller 201201 (450008)
- 4 ekey dLine cable MT 3,5 m Winkhaus EAV3/4/4+/BM+ 201360
- 5 ekey dLine cable transfer 201401