

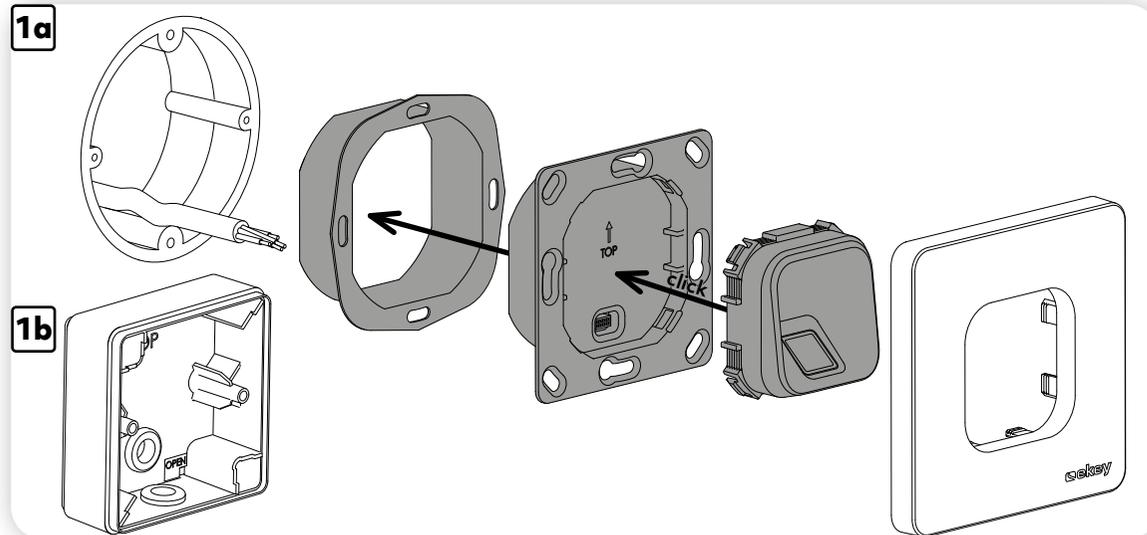
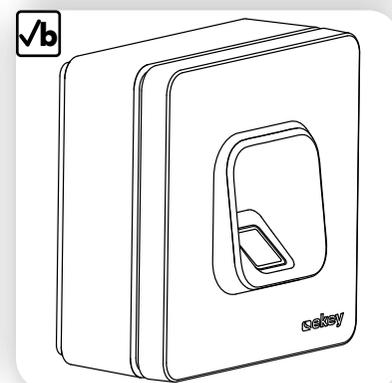
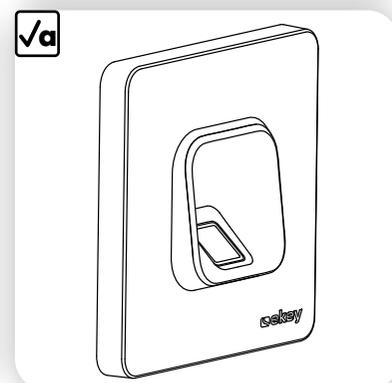
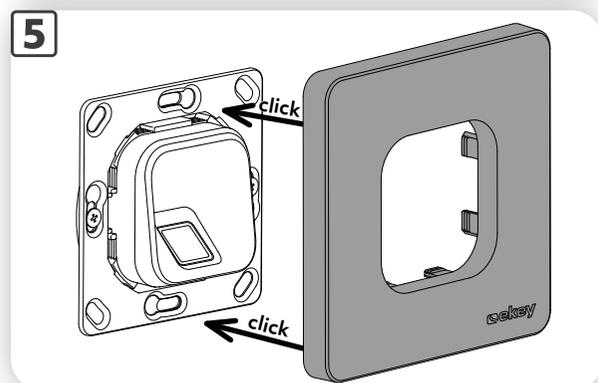
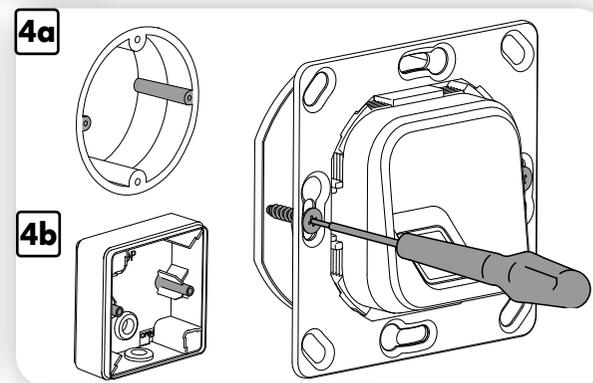
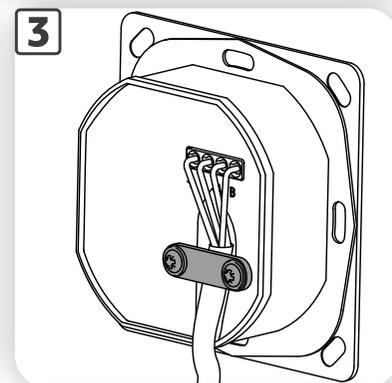


# Mounting instructions ekey xLine WM/OM

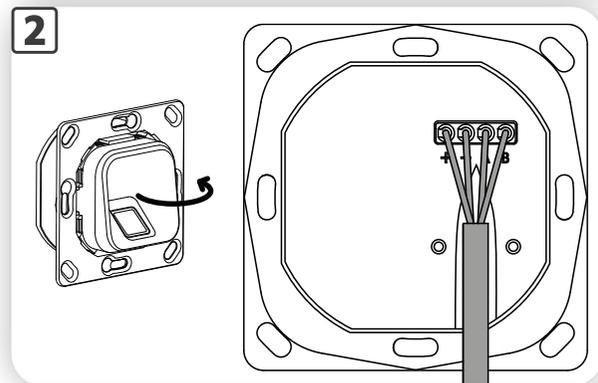

**Video instructions**  
You can watch the video instructions for installing the ekey xLine by scanning the QR code.

## RECOMMENDED MOUNTING HEIGHT

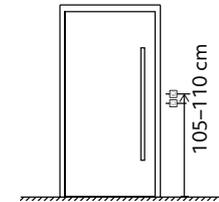

## ⚠ ATTENTION

**Property damage in the event of incorrect mounting and wiring:** The system devices are operated using electricity. They could be destroyed, e.g. by water ingress, if they are mounted and wired incorrectly. Mount and wire the system devices correctly before connecting the power. "TOP" on the wall-mounted housing must face upwards. Guide the cable through the cable grommet.

## 📌 NOTICE

Compatible with Kaiser flush-mounting one-gang box Art. no 1555-04, Kaiser cavity-wall O-range® one-gang junction box Art. no 9064-02 or similar boxes with 60 mm hole spacing for mounting on the support frame.

## 📌 NOTICE

These mounting instructions are not subject to updating. We reserve the right to make technical modifications and change the product's appearance; any liability for errors and misprints is excluded.